



Installation Requirements

The minimum specification required for FLOW SOLV® V5 is as follows:

- PC with a minimum 1GHZ processor
- Minimum of 512MB of RAM
- 35MB of Free Hard Disk Space
- Microsoft Windows® XP, Vista, 7, 8 and 8.1
- Minimum display resolution 1024 x 768 recommended

Installing FLOW SOLV® V5

Double Click the FLOW SOLV® icon to start the program.

The FLOW SOLV® V5 Setup Wizard will open, follow the instructions on screen.

The default location for the installation is the 32-bit program files folder. Read the 'License terms and conditions' and then tick the 'I agree to the License terms and conditions' box. Proceed by clicking the 'Install' button.

Registering FLOW SOLV® V5

Demonstration

The FLOW SOLV® V5 Demonstration can be launched from the 'FLOW SOLV® V5' shortcut icon on the desktop, or from 'Start, All Programs, FLOW SOLV® V5'.

Click 'Run Demonstration' in the window which appears. Fill in the User Details in the form that follows, click 'Save Registration Details' button if you do not wish to reenter your details each time you use FLOW SOLV® V5 Demonstration. Any required fields which are incomplete will be highlighted with a red exclamation mark.

Click 'Run Demonstration' to start the FLOW SOLV® V5 Demonstration. The Demonstration available for 30 days after the first use, you cannot Load, Save or Print file in the Demonstration. Please register FLOW SOLV® V5 to use these features.

Registration

To register FLOW SOLV® V5 you will need your five digit Licence Number, this will have been emailed to you when the package was purchased. If you have not received your licence number, please email registration@flowsolv.com.

FLOW SOLV® V5 can be launched from the 'FLOW SOLV® V5' shortcut icon on the desktop, or from 'Start, All Programs, FLOW SOLV® V5'.

Click 'Register FLOW SOLV® V5'. Select whether you will be using FLOW SOLV® V5 on a workstation or personal computer, your FLOW SOLV® V5 package provides licences for both. Enter your Licence number and click 'Next'.

Fill in the User Details in the form that follows. Any required fields which are incomplete will be highlighted.

A 'Product Activation' window will appear. You will now need to generate a SRI (System Registration Identifier) file. Click 'Generate' to create the file. Email the generated file to registration@flowsolv.com. In return you should receive a PAC (Product Activation Code) File within two working days. When you receive the file, download it to a suitable location, so it can be found and uploaded in the next step.

Click 'Browse' to find the PAC file. Once the PAC file is opened the location will appear in the box below. Check the location of the PAC file and click 'Activate FLOW SOLV® V5' to finish registration.

Starting FLOW SOLV® V5

Double Click the FLOW SOLV® V5 icon on the desktop to start the program. If you cannot locate the icon on the desktop then open FLOW SOLV® V5 from: 'Start, All Programs, FLOW SOLV® V5'.